

**MAINTENANCE SCHEDULE**

ITEMS	SERVICE		1 <sup>st</sup>		2 <sup>nd</sup>		3 <sup>rd</sup>		4 <sup>th</sup>		5 <sup>th</sup>		6 <sup>th</sup>		7 <sup>th</sup>		8 <sup>th</sup>		9 <sup>th</sup>		10 <sup>th</sup>		11 <sup>th</sup>		
	DAYS	1 <sup>st</sup> 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90
	KM	Note-1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500												
Fuel Line			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Throttle Operation			I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Bystarter Operation			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine Idle Speed/Carburetor			C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A
Air Cleaner*			C	C	C	C	R	C	C	C	R	C	C	C	C	C	C	C	R	C	C	C	C	C	C
Spark Plug			I, C, A	I, C, A	I, C, A	I, C, A	R	I, C, A	I, C, A	I, C, A	R	I, C, A	I, C, A	I, C, A	I, C, A	I, C, A	I, C, A	R	I, C, A	R	I, C, A	I, C, A	I, C, A	I, C, A	I, C, A
Valve Clearance			I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Engine Oil**			O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O
Engine Oil Strainer Screen			C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C
Engine Oil Centrifugal Filter			C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C
Electric Starter			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Oil Circulation			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Drive Chain@																									
Battery			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Shoe			I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Brake System (Brake Cam/Pedal)				C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L
Stop Lamp Switch			I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Headlamp Focus			I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Clutch			I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
Side Stand/Main Stand			L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
Nuts, Bolts & Fasteners***			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Wheel Bearings		Note-2	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Wheels/Tyres			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering Head Bearings			I	I, A	I	I, A	I	I, L, A	I	I, A	I	I, L, A	I	I, L, A	I	I, A	I	I, L, A	I	I, L, A	I	I, L, A	I	I, L, A	I, A
Front Suspension/Oil****			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear Suspension		Note-3	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

⚠ To be serviced by your Authorised Distributor/Dealer unless the owner has the relevant tools, technical information and is technically qualified.

\* In the interest of safety, we recommend that these jobs are carried out only by your Authorised Distributor/Dealer.

\*\* More frequent cleaning may be required when riding in dusty areas.

\*\*\* Replace engine oil once in every 6000 km. Top up if the oil level is at or near the lower level mark.

\*\*\*\* Inspect & maintain specified torque.

\*\*\*\*\* Replace once in every two years or 30000 km, whichever is earlier.

@ Visit Authorised Distributor/Dealer for inspection, cleaning, lubrication and adjustment of drive chain at every 2000 km.

Note-1: At higher odometer readings, repeat the frequency interval established here.

Note-2: Inspect the bearings free play, replace if necessary.

Note-3: Inspect for any play in the mounting bushes, replace if necessary.

I: INSPECT R: REPLACE C: CLEAN L: LUBRICATE A: ADJUST IF REQUIRED O: OIL CHANGE T: TOP UP E: EMISSION CHECK